


YOU CAN CALL ME WIRE


HEY, MACK.
NICE TO MEET YA.
I'M MR. TELEPHONE CABLE.
YOU PROBABLY KNOW ME BY MY
NICKNAME, FIELD WIRE. I'M THE
TOUGH GUY THAT CARRIES
YOUR TELEPHONE
MESSAGES.
MOST OF YOU COMMO
TYPES HAVE MET ME, BUT
VERY FEW OF YOU KNOW
ALL YOU SHOULD
ABOUT ME.

BEFORE YOU
HANDLE ME, THOUGH,
YOU'VE GOT TO ORDER ME
AND MY REEL BUDDIES.
HERE ARE THE NSNs
YOU NEED...

Item	NSN
RL-159 (reel only)	8130-00-174-0812

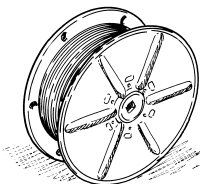


DR-5 (reel only)	8130-00-253-0106
DR-7 (reel only)	8130-00-634-7984
DR-8 (reel only)	8130-00-407-7859
WD-1A on DR-8 (1640 feet)	6145-01-155-4258

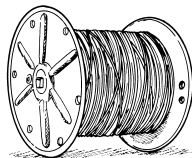

ME WIRE


SOME OF YOU GUYS
HAVE BEEN ASKING ABOUT
MY WEIGHT FOR TURN-IN AND
STUFF LIKE THAT. WELL, I'M NOT
SENSITIVE. HERE'S WHAT
I WEIGH PER MILE...

Item	NSN
WD-1A on DR-5 (1 mile)	6145-00-220-9933
WD-1A on RL-159 (1 mile)	6145-01-155-4256
WD-1A on MX-306 (1/2 mile)	6145-01-155-4257

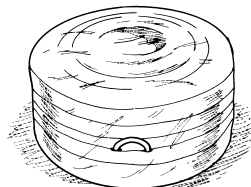


WD-15 (1,000 feet)	6145-00-284-1499
WF-9 (1 foot)	6145-00-112-8581
WF-16 on DR-5 (1 mile)	6145-00-910-8847
WF-16 on DR-8 (1,000 feet)	6145-01-259-9203

Item	Lbs
WD-1	47.5
WD-1A	38.72
WF-16	62

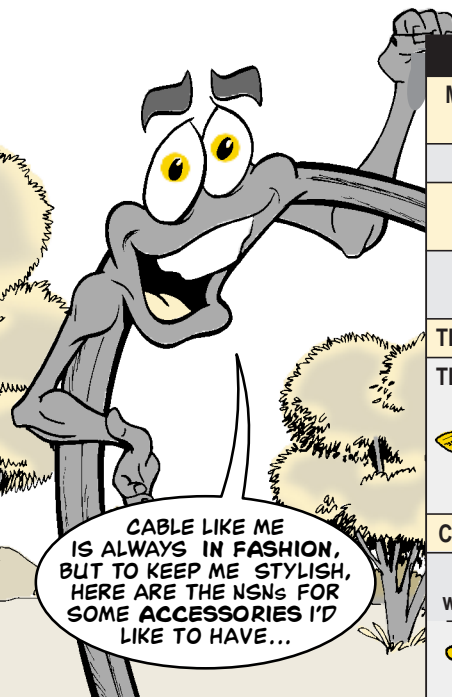




CABLE LIKE ME IS ALWAYS IN FASHION, BUT TO KEEP ME STYLISH, HERE ARE THE NSNs FOR SOME ACCESSORIES I'D LIKE TO HAVE...

Wire Tags (50)	NSN 9905-00-537-
red	8954
yellow	8955
green	8956
white	8957

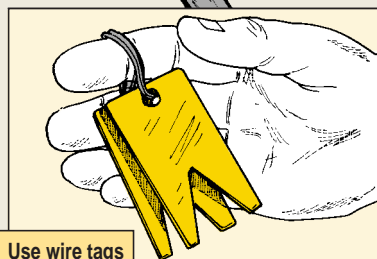

Use wire tags

PS 573

Item	NSN
MK-356 splicing sleeve kit	5940-00-818-1774
Lance pole	5975-00-407-6371
TL-636 black electrical tape	5970-00-685-9059
TL-600 white electrical tape	5970-00-240-0620
TL-83 friction tape	5970-00-644-3167
TL-29 pocket knife	5110-00-240-5943
	
CS-34 tool carrier	5140-00-498-8898
TL-13 pliers without skinners	5120-00-239-8254
	
	
TL-13 pliers with skinners	5120-00-247-2063


52

AUG 00


AS TOUGH AS I AM, SOMETIMES I BREAK. THAT MEANS YOU'VE GOT TO SPLICE ME. THE U1R SPLICE, NSN 5940-00-935-8262, WILL HELP YOU DO THE JOB QUICK AND EASY ON WD-1, WD-1A AND WF-16 WIRE.

JUST MAKE SURE YOU USE THE RIGHT CRIMPER WITH THE SPLICE BECAUSE ANY OLD CRIMPER WON'T DO. USE THE E9BM CRIMPER, NSN 5120-01-421-3979.

Center U1R in E9B crimper and squeeze

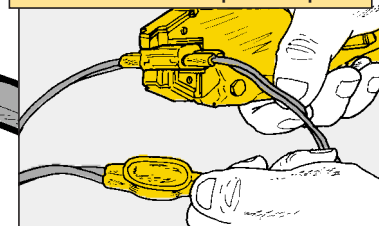

Tie ends with a single sheet bend knot

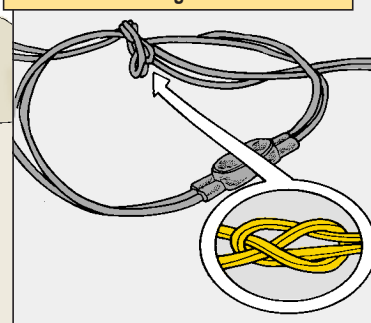

FOR SOME GOOD TIPS ON HOW TO LAY, RECOVER AND REPAIR ALL WIRE, SEE FM 24-20, FIELD WIRE AND FIELD CABLE TECHNIQUES.



NOW THAT WE'RE FRIENDS, ONE MORE WORD—DON'T ABUSE ME. I'M TOUGH, BUT I'M NOT INDESTRUCTIBLE. I'LL LAST LONGER AND CAUSE YOU A LOT LESS WORK IF YOU TAKE CARE OF ME WITH PREVENTIVE MAINTENANCE AND BY-THE-BOOK HANDLING.

53

PS END